


GEOMETRY & SOILS

INPUT GUIDE FOR GRAVITY WALLS

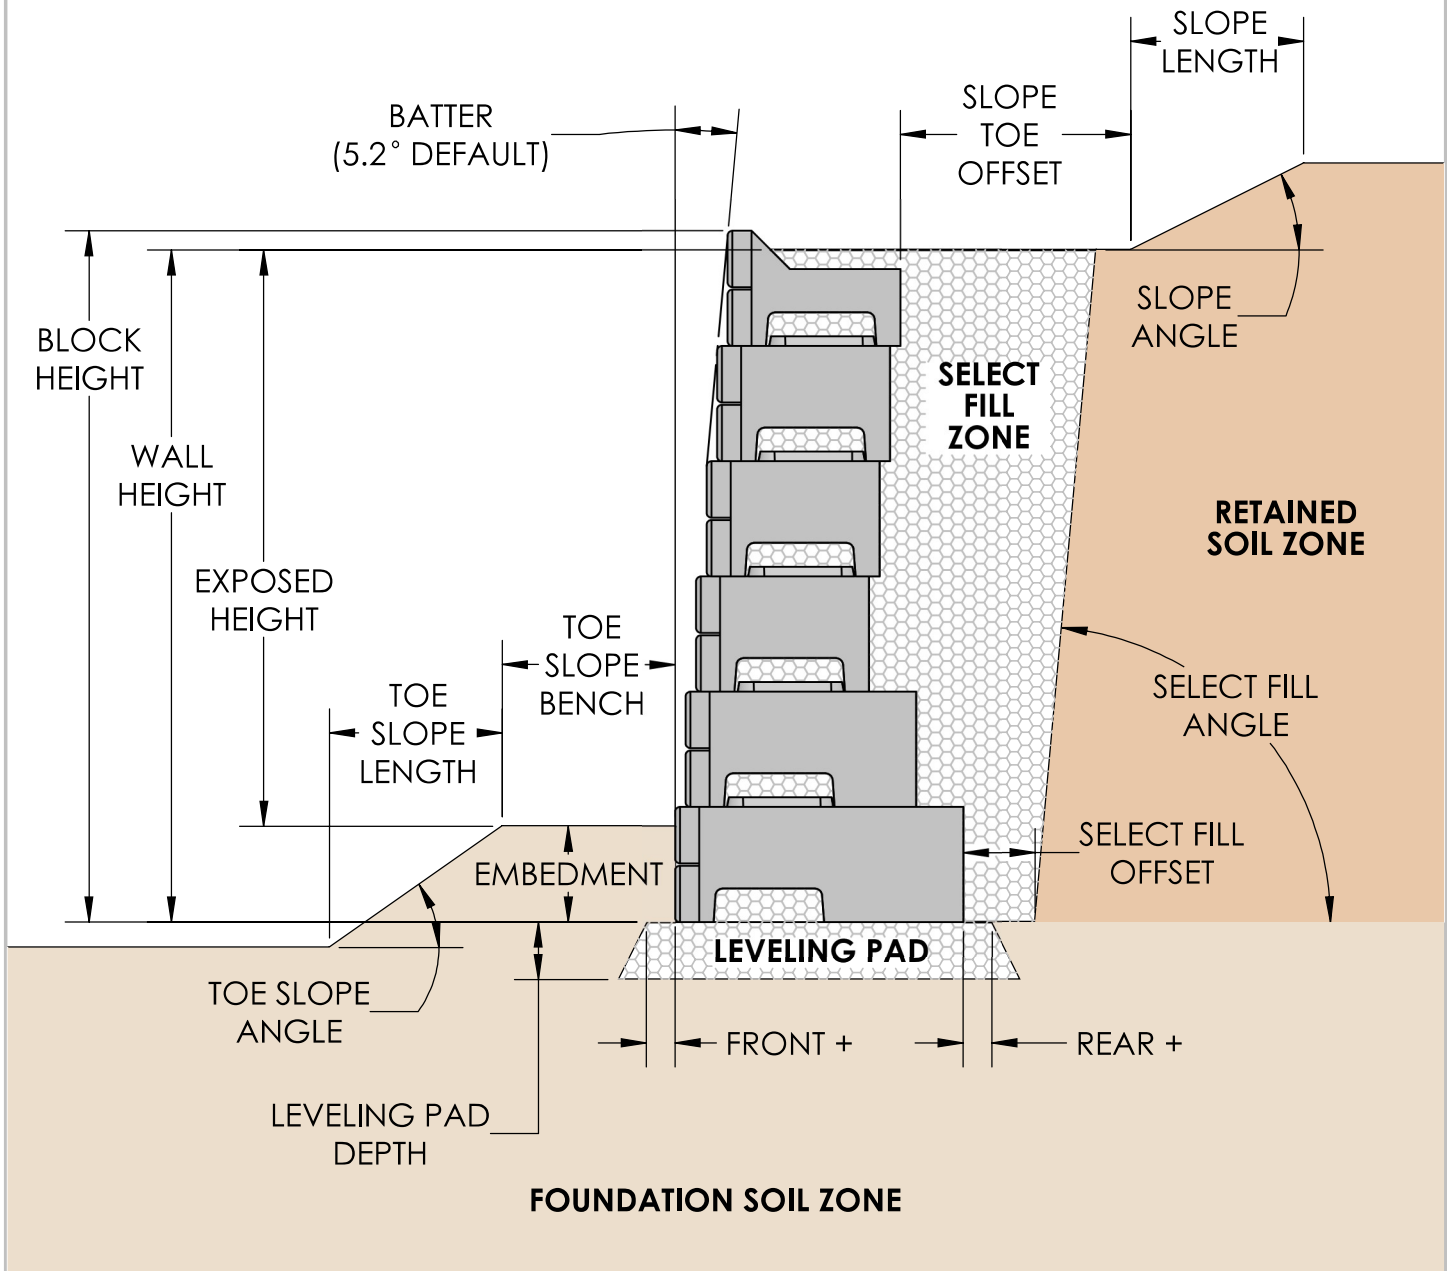

NOTES:

- LIVE LOADS AND DEAD LOADS FOLLOW SAME INPUT PROCEDURE AS SLOPES.
- SELECT FILL MUST BE ENABLED ON "SOIL PROPERTIES" PAGE; OTHERWISE ONLY RETAINED SOIL IS CONSIDERED.
- CAP OFFSET ALLOWS TOP FINISHED GRADE TO BE ABOVE TOP BLOCK, INSTEAD OF ADDING AN ADDITIONAL ROW OF BLOCK.



DRAWN BY	DATE
RYAN STUCKI	5/24/2021
16120 S. PONY EXPRESS RD BLUFFDALE, UTAH 84065 PHONE: (801) 571-2028	

TITLE:

GRAVITY WALL INPUT GUIDE

SCALE: NA

REVISION: 01

SHEET 1 OF 1